

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 1 of 50                            |

## HygroClip 2 (HC2) Humidity Temperature Probes User Guide



|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 2 of 50                            |

## Table of contents

|           |                                                                                 |           |
|-----------|---------------------------------------------------------------------------------|-----------|
| <b>1</b>  | <b>Overview.....</b>                                                            | <b>3</b>  |
| 1.1       | Hardware and software compatibility .....                                       | 3         |
| <b>2</b>  | <b>Models .....</b>                                                             | <b>4</b>  |
| <b>3</b>  | <b>General description .....</b>                                                | <b>25</b> |
| 3.1       | Power supply.....                                                               | 25        |
| 3.2       | Measured parameters .....                                                       | 25        |
| 3.3       | Calculated parameters .....                                                     | 25        |
| 3.4       | Analog output signals.....                                                      | 25        |
| 3.5       | Digital interface .....                                                         | 26        |
| 3.6       | Connector .....                                                                 | 27        |
| 3.7       | Sensor protection (dust filter) .....                                           | 27        |
| <b>4</b>  | <b>User configurable settings and functions .....</b>                           | <b>28</b> |
| 4.1       | Function overview .....                                                         | 29        |
| 4.2       | Factory default settings .....                                                  | 31        |
| <b>5</b>  | <b>Mechanical installation .....</b>                                            | <b>32</b> |
| 5.1       | General guidelines for fixed installation.....                                  | 32        |
| <b>6</b>  | <b>Electrical installation.....</b>                                             | <b>33</b> |
| 6.1       | General guidelines for fixed installation.....                                  | 33        |
| 6.2       | Analog signal wiring .....                                                      | 34        |
| 6.3       | Minimum analog output load .....                                                | 34        |
| 6.4       | Digital signal wiring .....                                                     | 34        |
| 6.5       | Grounding .....                                                                 | 34        |
| <b>7</b>  | <b>Operation.....</b>                                                           | <b>35</b> |
| 7.1       | Operation with an indicator, data logger or transmitter.....                    | 35        |
| 7.2       | Stand-alone operation as an analog probe .....                                  | 35        |
| 7.3       | Connectivity examples for stand-alone probes.....                               | 36        |
| 7.4       | Hand-held probes used with an indicator .....                                   | 37        |
| <b>8</b>  | <b>Maintenance .....</b>                                                        | <b>38</b> |
| 8.1       | Cleaning or replacing the dust filter.....                                      | 38        |
| 8.2       | Periodic calibration check .....                                                | 38        |
| 8.3       | Validation of the output signals transmission .....                             | 39        |
| <b>9</b>  | <b>Firmware updates .....</b>                                                   | <b>40</b> |
| <b>10</b> | <b>Technical data.....</b>                                                      | <b>41</b> |
| 10.1      | Specifications .....                                                            | 41        |
| 10.2      | Dew point accuracy.....                                                         | 46        |
| 10.3      | Effect of cable temperature on the accuracy of probes HC2-C04 and HC2-C05 ..... | 47        |
| <b>11</b> | <b>Accessories and parts .....</b>                                              | <b>48</b> |
| <b>12</b> | <b>Supporting documents .....</b>                                               | <b>49</b> |
| <b>13</b> | <b>Document releases.....</b>                                                   | <b>50</b> |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>3</b> of 50                     |

## Applicability:

This manual applies to all HC2 probes with firmware version 3.0 or higher. Changes to the last digit of the version number reflect minor firmware changes that do not affect the manner in which the probe should be operated.

## 1 Overview

The HC2 series are digital humidity-temperature probes based on the AirChip 3000 technology. These probes feature a UART serial interface and two 0...1 V linear analog output signals.

The HC2 probes are designed for use with the HygroClip 2 generation of ROTRONIC humidity-temperature instruments: hand-held and bench top indicators, data loggers, transmitters, hygrostats, etc. The HC2 probes maintain all of the benefits of the original HygroClip technology such as the possibility of hot-swapping probes and feature significant improvements in the area of measurement accuracy and functionality.

The HC2 probes can also be used as a stand-alone device using either the analog output signals or the probe digital interface. Connectors, cables and digital interface adapters are available to this purpose. Digital integration with OEM applications is facilitated by the probe communication protocol options.

The HC2 probes offer the following user functions:

- o User configurable settings
- o Calculation of the dew or frost point
- o Humidity temperature calibration and adjustment
- o Simulator mode
- o Automatic humidity sensor test and drift compensation
- o Sensor failure mode
- o Data recording

The ability for the user to easily update the AirChip 3000 firmware means that the HC2 probes can be kept up-to-date regarding any future functionality improvement.

Available in different configurations, the HC2 probe series is designed to meet the requirements of a large number of applications and environments.

### 1.1 *Hardware and software compatibility*

The HC2 probes are compatible only with the AirChip 3000 generation of ROTRONIC humidity-temperature instruments and are not backward compatible with instruments based on the previous technology.

Configuration of the HC2 probes and access to the probe functions requires a PC with the ROTRONIC HW4 software version 2.1.0 or higher or connection to a compatible instrument from ROTRONIC. For firmware updates HW4 software version 3.3.0 or higher is needed.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 4 of 50                            |

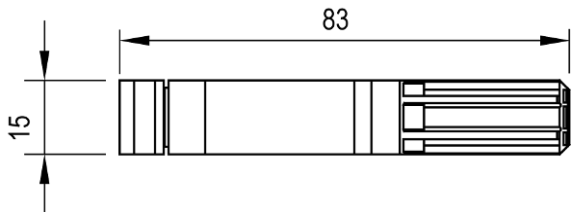
## 2 Models

In the following tables, we have indicated the type of instrument primarily used with each probe model. The following should also be noted:

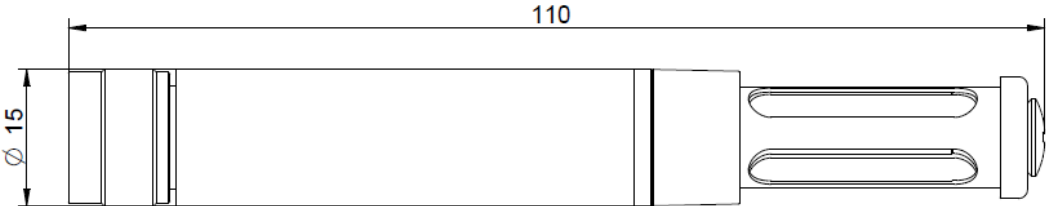
- o The HC2 probes can be directly connected to a PC or to an Ethernet network using one of the available digital interface adapters (see separate document **E-M-HC2-accessories**).
- o The HC2 Probes can also be used as a stand alone device with two analog output signals. Different connectors are available to this purpose (see separate document **E-M-HC2-accessories**).

Regardless of the probe model, the analog outputs signals are always scaled in the same way by the factory (0...1 V = 0...100 %RH and 0...1 V = -40...60 °C). The user is responsible for reconfiguring the probe analog outputs (requires the ROTRONIC HW4 software) and for providing power to the probe.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
|                                                                  | Document Type                           |
| Document title                                                   | Page 5 of 50                            |

| Climate measurement                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <i>For use with indicators, data loggers and transmitters, with or without an extension cable</i>                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |  |
| HC2-S                                                                                                                                                                                                                                                                                                                                                         | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits: $-50 \dots 100 \text{ }^\circ\text{C}$ ( $-58 \dots 212 \text{ }^\circ\text{F}$ )<br>Diameter: 15 mm (0.6")<br>Length: 85 mm (3.3")<br>Housing material: polycarbonate, black<br>Standard dust filter: Polyethylene, $20 \text{ }\mu\text{m}$<br>Sensor: HYGROMER® IN-1<br>Weight: 10 g (0.35 oz) |  |
| HC2-S3                                                                                                                                                                                                                                                                                                                                                        | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits: $-50 \dots 100 \text{ }^\circ\text{C}$ ( $-58 \dots 212 \text{ }^\circ\text{F}$ )<br>Diameter: 15 mm (0.6")<br>Length: 85 mm (3.3")<br>Housing material: polycarbonate, white<br>Standard dust filter: Polyethylene, $40 \text{ }\mu\text{m}$<br>Sensor: HYGROMER® IN-1<br>Weight: 10 g (0.35 oz) |  |
| HC2-S-HH                                                                                                                                                                                                                                                                                                                                                      | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits: $-50 \dots 100 \text{ }^\circ\text{C}$ ( $-58 \dots 212 \text{ }^\circ\text{F}$ )<br>Diameter: 15 mm (0.6")<br>Length: 85 mm (3.3")<br>Housing material: polycarbonate, black<br>Standard dust filter: MFD fleece<br>Sensor: HYGROMER® HH-1<br>Weight: 10 g (0.35 oz)                             |  |
|  <p>Technical drawing of the HC2 probe. It shows a side view of the cylindrical probe with a diameter dimension of 15 mm and a length dimension of 83 mm. The drawing includes details of the probe's structure, such as the sensor housing and the mounting bracket.</p> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |  |

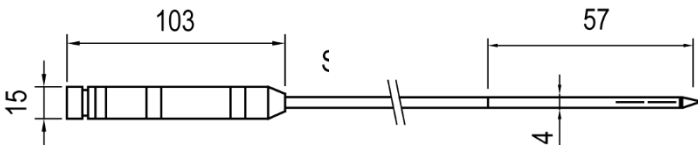
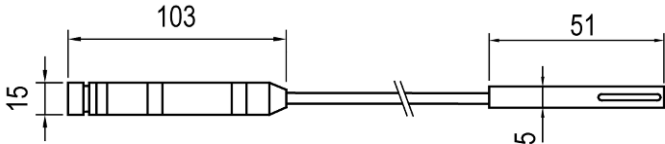
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 6 of 50                            |

| Climate measurement                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>For use with indicators, data loggers and transmitters, with or without an extension cable</i> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| HC2-SM                                                                                            | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits: $-50 \dots 100 \text{ }^{\circ}\text{C}$ ( $-58 \dots 212 \text{ }^{\circ}\text{F}$ )<br>Diameter: 15 mm (0.6")<br>Length: 85 mm (3.3")<br>Housing material: Stainless steel, DIN 1.4301<br>Standard dust filter: Wiremesh filter, $20 \dots 25 \text{ }\mu\text{m}$<br>Sensor: HYGROMER® IN-1<br>Weight: 50 g (1.76 oz) |
|                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 7 of 50                            |

### Measurement in tight spaces

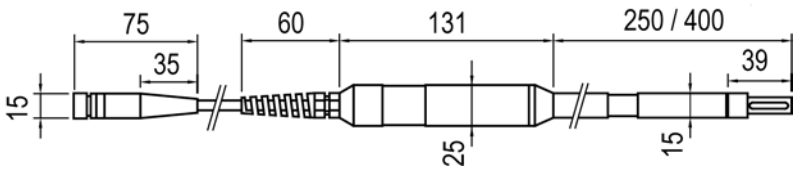
#### For use with indicators, data loggers and transmitters

|                                                                                     |                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-C04                                                                             | Humidity measuring range: 0...100 %RH<br>Temperature limits -40...85 °C (-40...185 °F)<br>Diameter: 4 mm (0.16"), cable length (electronics – probe tip: about 0.59 m (1.9 ft)<br>Probe electronics housing: polycarbonate, black<br>Weight: approx. 150 g (5.3 oz) |
|   |                                                                                                                                                                                                                                                                     |
| HC2-C05                                                                             | Same as HC2-C04 but with 5 mm diameter (0.2")<br>Can be equipped with Teflon dust filter SP-T05<br>Weight: approx. 160 g (5.6 oz)                                                                                                                                   |
|  |                                                                                                                                                                                                                                                                     |

#### Note:

Accuracy of the HC2-C04 and HC2-C05 probe models is affected by the temperature of the cable separating the sensors from the electronics (see §10.3).

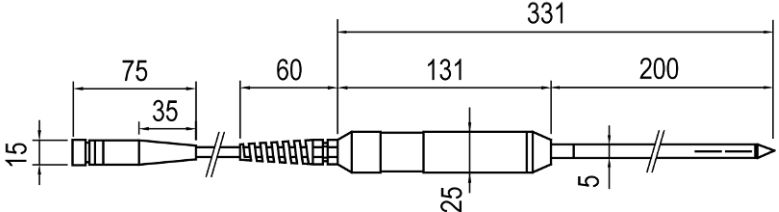
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 8 of 50                            |

| Spot check measurements in air ducts, chambers and ovens                            |                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Handheld probe for use with indicators and data loggers                             |                                                                                                                                                                                                                                                                                                                                                    |
| HC2-HK25                                                                            | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -100...150 °C (-148...302 °F)<br>Barrel: diameter: 15 mm (0.6"), length: 250 mm (9.8")<br>Probe cable length: 2 m (6.5 ft)<br>Handgrip: POM, black -, barrel: PEEK, black<br>Filter base (NSP-ME) with wire mesh filter cartridge (SP-M15)<br>Weight: approx. 210 g (7.4 oz) |
| HC2-HK40                                                                            | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -100...200 °C (-148...392 °F)<br>Same as HC2-HK25 but with barrel 400 mm barrel length (15.7")<br>Weight: approx. 240 g (8.5 oz)                                                                                                                                             |
|  |                                                                                                                                                                                                                                                                                                                                                    |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 9 of 50                            |

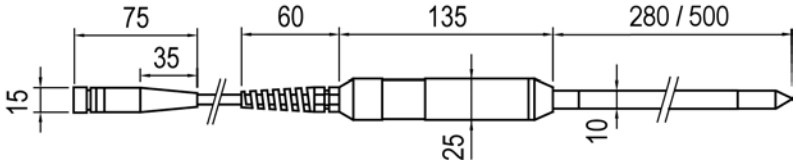
#### Measurement of dust-free granular products in bulk

##### Handheld probe for use with indicators and data loggers

|                                                                                    |                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-P05                                                                            | Humidity measuring range: 0...100 %RH<br>Temperature limits -40...85 °C (-40...185 °F)<br>Barrel: diameter: 5 mm (0.2"), length: 200 mm (7.9")<br>Probe cable length: 2 m (6.5 ft)<br>Handgrip: POM, black - barrel: stainless steel DIN 1.4305<br>Weight: approx. 160 g (5.6 oz) |
|  |                                                                                                                                                                                                                                                                                   |

#### Measurement of seeds, granulates and powders in bulk

##### Handheld probe for use with indicators and data loggers

|                                                                                      |                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-HP28                                                                             | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -40...85 °C (-40...185 °F)<br>Barrel: diameter: 10 mm (0.4"), length: 280 mm (11.0")<br>Probe cable length: 2 m (6.5 ft)<br>Handgrip: POM, black - barrel: stainless steel DIN1.4301<br>Dust filter: sintered steel filter cartridge (ET-Z10)<br>Weight: approx. 200 g (7.1 oz) |
| HC2-HP50                                                                             | Humidity measuring range: 0...100 %RH<br>Same as HC2-HP28 but with barrel 500 mm barrel length (19.7")<br>Weight: approx. 250 g (8.8 oz)                                                                                                                                                                                                              |
|  |                                                                                                                                                                                                                                                                                                                                                       |

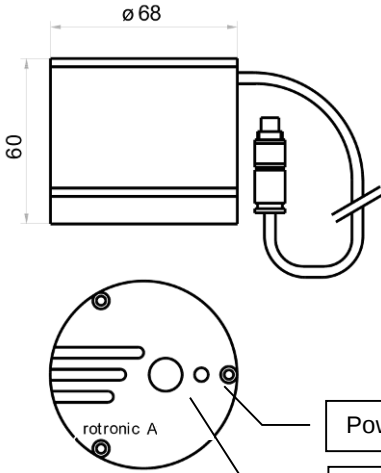
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
|                                                                  | Document Type                           |
| Document title                                                   | Page <b>10</b> of 50                    |

#### Measurement of paper – cardboard stacks and rolls

##### *Handheld probe for use with indicators and data loggers*

|          |                                                                                                                                                                                                                                                                                                         |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-HS28 | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -40...85 °C (-40...185 °F)<br>Blade: thickness: 4 mm (0.16"), width: 22 mm (0.87"), length: 280 mm (11.0")<br>Probe cable length: 2 m (6.5 ft)<br>Weight: approx. 240 g (8.5 oz)<br>Handgrip: POM, black - blade: aluminum / elox |
| HC2-HS42 | Same as HC2-HS28 but with 420 mm blade length (16.5")<br>Weight: approx. 300 g (10.6 oz)                                                                                                                                                                                                                |
|          |                                                                                                                                                                                                                                                                                                         |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>11</b> of 50                    |

| Measurement of product samples (liquids, pastes, powders, granules or chunks)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Handheld probe for use with indicators and data loggers                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                    |
| HC2-AW                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -40...85 °C (-40...185 °F)<br>Barrel: aluminum (top) , stainless steel (bottom)<br>Probe cable length: 0.95 m (37.5")<br>Weight: approx. 541 g (1 lb 3.1 oz) |
| <div style="display: flex; align-items: center; justify-content: space-between;"> <div style="text-align: center;">  </div> <div style="text-align: right;"> <p>Use together with WP14 or WP-40 sample cup holder</p> <p>Prior to use, verify the integrity and cleanliness of the sealing O-ring located under the probe</p> </div> </div> <div style="display: flex; justify-content: flex-end; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px 5px; margin-right: 10px;">Power Indicator (red LED)</div> <div style="border: 1px solid black; padding: 2px 5px;">Power ON/OFF (push button)</div> </div> |                                                                                                                                                                                                                                    |

**Note:**

When using the HC2-AW probe, check that the red LED on top of the probe is lit. This indicates that the probe is being powered. If necessary, power the probe by pressing once on the red button located on top of the probe. When the red LED is not lit, the probe is not powered and the instrument is not receiving a signal from the probe.

|                                                                                    |                                                 |
|------------------------------------------------------------------------------------|-------------------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b><br>Document code                                       | Rotronic AG<br>Bassersdorf, Switzerland<br>Unit |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b><br>Document title | <b>Instruction Manual</b><br>Document Type      |
|                                                                                    | Page <b>12</b> of 50                            |

| Humidity and temperature measurement in paper industry                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BFC-UART                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor -40...85 °C (-40...185 °F)<br>Barrel: aluminum (top) , stainless steel DIN 1.4301 (bottom)<br>Probe cable length: 0.95 m (37.5")<br>Weight: approx. 1070 g (2 lb 3.2 oz) |
| <div data-bbox="305 678 1198 1476"> <p>The drawing shows a side view and a top view of the BFC-UART probe. The side view shows a cylindrical barrel with a diameter of 26 mm at the top. The total height is 65.2 mm, and the base diameter is 27.8 mm. A cable with an E2 connector is attached to the side, with a 1.5 mm dimension indicated. The top view shows a circular base with a bore circle diameter of 56 mm. Three fastening bolts are arranged in a circle with a 120-degree angle between them. The thread is M6 (3 * 120°). A red button is located on the side of the base.</p> </div> |                                                                                                                                                                                                                                                |

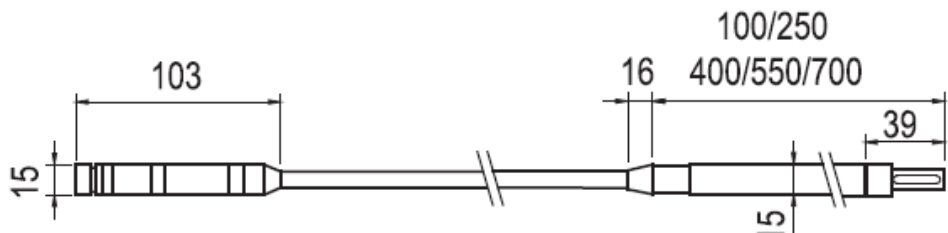
**Note:**  
When using the BFC-UART probe, check that the red LED on top of the probe is lit. This indicates that the probe is being powered. If necessary, power the probe by pressing once on the red button located on top of the probe. When the red LED is not lit, the probe is not powered and the instrument is not receiving a signal from the probe.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Page <b>13</b> of 50                    |

| Process measurement (fixed installation)   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |  |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| For use with transmitters and data loggers |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |  |
| HC2-IC102<br>HC2-IC105                     | Accuracy: $\pm 0.8$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -100...200 °C <sup>1</sup> (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 100 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 230 g / 8.1 oz, 2 m cable<br>470 g / 16.6 oz, 5 m cable  |  |
| HC2-IC302<br>HC2-IC305                     | Accuracy: $\pm 0.8$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -100...200 °C <sup>1</sup> (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 250 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 260 g / 9.2 oz, 2 m cable<br>500 g / 17.6 oz, 5 m cable  |  |
| HC2-IC402<br>HC2-IC405                     | Accuracy: $\pm 0.8$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -100...200 °C <sup>1</sup> (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 400 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 290 g / 10.2 oz, 2 m cable<br>530 g / 18.7 oz, 5 m cable |  |

<sup>1</sup> Rotronic probes allow a peak load of 3x5 minutes at 200 °C without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to 3 %RH over a 25 hours period.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
|                                                                  | Document Type                           |
| Document title                                                   | Page <b>14</b> of 50                    |

|                                                                                      |                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| HC2-IC502<br>HC2-IC505                                                               | Accuracy:<br>Humidity measuring range:<br>Temperature limits at sensor:<br>Diameter barrel:<br>Length (probe head):<br>Cable length:<br><br>Housing material:<br>Standard filter:<br>Sensor:<br>Weight: | $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$<br>$0 \dots 100\% \text{RH}$<br>$-100 \dots 200\text{ }^{\circ}\text{C}^2$ ( $-148 \dots 392\text{ }^{\circ}\text{F}$ )<br>$15 \text{ mm}$ ( $0.6''$ )<br>$550 \text{ mm}$ ( $3.9''$ ). See note below<br>$2 \text{ m}$ ( $6.5 \text{ ft}$ )<br>$5 \text{ m}$ ( $16.4 \text{ ft}$ )<br><br>PEEK<br>None, must be ordered separately<br>HYGROMER® IN-1<br>$320 \text{ g}$ / $11.3 \text{ oz}$ , $2 \text{ m}$ cable<br>$560 \text{ g}$ / $19.8 \text{ oz}$ , $5 \text{ m}$ cable |
| HC2-IC702<br>HC2-IC705                                                               | Accuracy:<br>Humidity measuring range:<br>Temperature limits at sensor:<br>Diameter barrel:<br>Length (probe head):<br>Cable length:<br><br>Housing material:<br>Standard filter:<br>Sensor:<br>Weight: | $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$<br>$0 \dots 100\% \text{RH}$<br>$-100 \dots 200\text{ }^{\circ}\text{C}^2$ ( $-148 \dots 392\text{ }^{\circ}\text{F}$ )<br>$15 \text{ mm}$ ( $0.6''$ )<br>$100 \text{ mm}$ ( $3.9''$ ). See note below<br>$2 \text{ m}$ ( $6.5 \text{ ft}$ )<br>$5 \text{ m}$ ( $16.4 \text{ ft}$ )<br><br>PEEK<br>None, must be ordered separately<br>HYGROMER® IN-1<br>$350 \text{ g}$ / $12.3 \text{ oz}$ , $2 \text{ m}$ cable<br>$590 \text{ g}$ / $20.8 \text{ oz}$ , $5 \text{ m}$ cable |
|  |                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

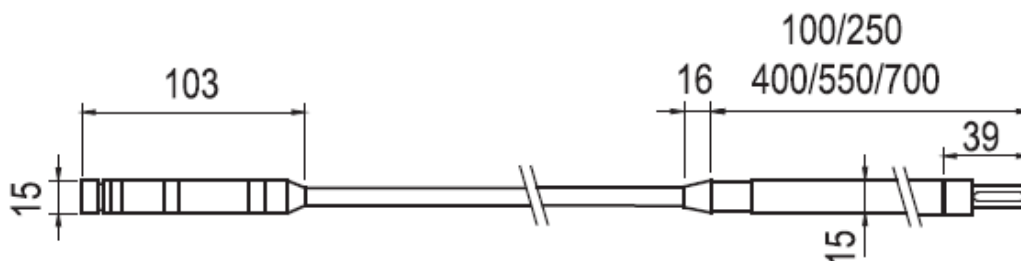
<sup>2</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200 \text{ }^\circ\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>15</b> of 50                    |

### Process measurement for hydrogen peroxide H2O2 applications

#### For use with transmitters and data loggers

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IC102-HH<br>HC2-IC105-HH | Accuracy: $\pm 1.2$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -50...120 °C (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 100 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® HH -1<br>Weight: 230 g / 8.1 oz, 2 m cable<br>470 g / 16.6 oz, 5 m cable  |
| HC2-IC302-HH<br>HC2-IC305-HH | Accuracy: $\pm 1.2$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -50...120 °C (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 250 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® HH -1<br>Weight: 260 g / 9.2 oz, 2 m cable<br>500 g / 17.6 oz, 5 m cable  |
| HC2-IC402-HH<br>HC2-IC405-HH | Accuracy: $\pm 1.2$ %RH, $\pm 0.1$ K at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -50...120 °C (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 400 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® HH -1<br>Weight: 290 g / 10.2 oz, 2 m cable<br>530 g / 18.7 oz, 5 m cable |



|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
|                                                                  | Document Type                           |
| Document title                                                   | Page <b>16</b> of 50                    |

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IC502-HH<br>HC2-IC505-HH | Accuracy: $\pm 1.2\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-50 \dots 120\text{ }^{\circ}\text{C}$ ( $-148 \dots 392\text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 550 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® HH -1<br>Weight: 320 g / 11.3 oz, 2 m cable<br>560 g / 19.8 oz, 5 m cable |
| HC2-IC702-HH<br>HC2-IC705-HH | Accuracy: $\pm 1.2\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-50 \dots 120\text{ }^{\circ}\text{C}$ ( $-148 \dots 392\text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 100 mm (3.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® HH-1<br>Weight: 350 g / 12.3 oz, 2 m cable<br>590 g / 20.8 oz, 5 m cable  |
|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

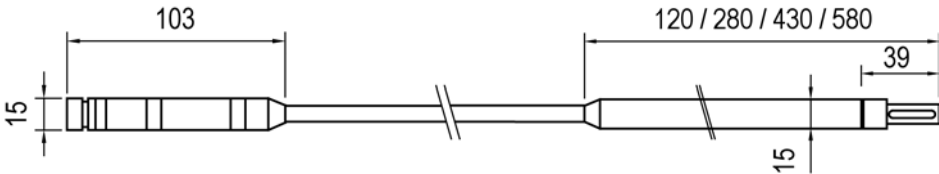




|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>19</b> of 50                    |

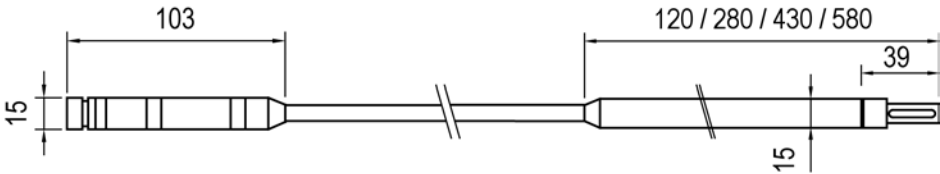
### Process measurement (fixed installation)

#### For use with transmitters and data loggers

|                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IM102<br>HC2-IM105                                                               | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -100...200 °C <sup>5</sup> (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 120 mm (4.7"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK (connector)<br>Stainless steel, DIN 1.4301 (probe head)<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 260 g / 9.2 oz, 2 m cable<br>420 g / 14.8 oz, 5 m cable   |
| HC2-IM302<br>HC2-IM305                                                               | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at 10...30 °C<br>Humidity measuring range: 0...100 %RH<br>Temperature limits at sensor: -100...200 °C <sup>5</sup> (-148...392 °F)<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 280 mm (11.0"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK (connector)<br>Stainless steel, DIN 1.4301 (probe head)<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 400 g / 14.1 oz, 2 m cable<br>640 g / 22.6 oz, 5 m cable |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

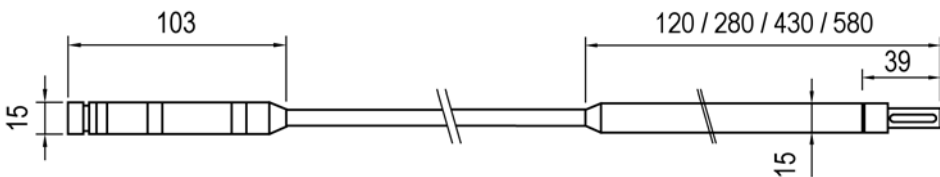
<sup>5</sup> Rotronic probes allow a peak load of 3x5 minutes at 200 °C without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to 3 %RH over a 25 hours period.

|                                                                                    |                                                 |
|------------------------------------------------------------------------------------|-------------------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b><br>Document code                                       | Rotronic AG<br>Bassersdorf, Switzerland<br>Unit |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b><br>Document title | <b>Instruction Manual</b><br>Document Type      |
|                                                                                    | Page <b>20</b> of 50                            |

|                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IM402<br>HC2-IM405                                                               | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}^6$ ( $-148 \dots 392 \text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 430 mm (16.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK (connector)<br>Stainless steel, DIN 1.4301 (probe head)<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 540 g / 19.0 oz, 2 m cable<br>780 g / 27.5 oz, 5 m cable |
| HC2-IM502<br>HC2-IM505                                                               | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}^6$ ( $-148 \dots 392 \text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 580 mm (22.8"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: PEEK (connector)<br>Stainless steel, DIN 1.4301 (probe head)<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 680 g / 24.0 oz, 2 m cable<br>920 g / 32.5 oz, 5 m cable |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

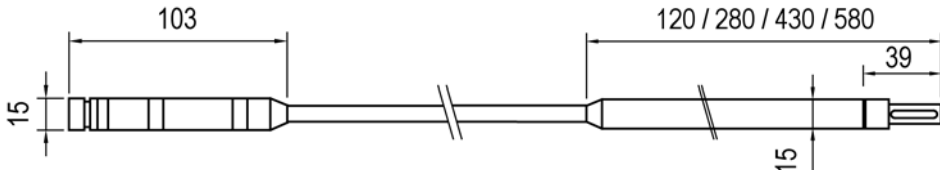
<sup>6</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200 \text{ }^{\circ}\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

|                                                                                    |                                                 |
|------------------------------------------------------------------------------------|-------------------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b><br>Document code                                       | Rotronic AG<br>Bassersdorf, Switzerland<br>Unit |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b><br>Document title | <b>Instruction Manual</b><br>Document Type      |
|                                                                                    | Page <b>21</b> of 50                            |

|                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IM102-M<br>HC2-IM105-M                                                           | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}^7$ ( $-148 \dots 392 \text{ }^\circ\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 120 mm (4.7"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: Stainless steel, DIN 1.4301<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 310 g / 10.9 oz, 2 m cable<br>470 g / 16.6 oz, 5 m cable  |
| HC2-IM302-M<br>HC2-IM305-M                                                           | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}^7$ ( $-148 \dots 392 \text{ }^\circ\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 280 mm (11.0"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: Stainless steel, DIN 1.4301<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 460 g / 15.9 oz, 2 m cable<br>690 g / 24.3 oz, 5 m cable |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

<sup>7</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200 \text{ }^\circ\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>22</b> of 50                    |

|                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IM402-M<br>HC2-IM405-M                                                           | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}^8$ ( $-148 \dots 392 \text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 430 mm (16.9"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: Stainless steel, DIN 1.4301<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 590 g / 20.8 oz, 2 m cable<br>820 g / 28.9 oz, 5 m cable |
| HC2-IM502-M<br>HC2-IM505-M                                                           | Accuracy: $\pm 0.8\% \text{RH}$ , $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$<br>Humidity measuring range: $0 \dots 100\% \text{RH}$<br>Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}^8$ ( $-148 \dots 392 \text{ }^{\circ}\text{F}$ )<br>Diameter barrel: 15 mm (0.6")<br>Length (probe head): 580 mm (22.8"). See note below<br>Cable length: 2 m (6.5 ft)<br>5 m (16.4 ft)<br>Housing material: Stainless steel, DIN 1.4301<br>Standard filter: None, must be ordered separately<br>Sensor: HYGROMER® IN-1<br>Weight: 730 g / 25.7 oz, 2 m cable<br>970 g / 34.2oz, 5 m cable  |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

**Note 1:**

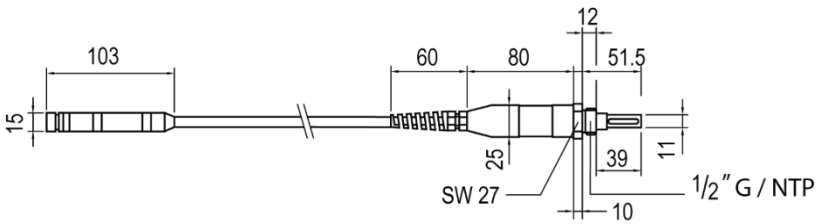
- o HC2-IMxxx-M probes are the same as HC2-IMxxx but are equipped with a stainless steel connector instead of PPS.
- o HC2-IM102 (120 mm barrel length) - to avoid measurement errors due to temperature gradients fully immerse the probe barrel in the environment to be measured.

<sup>8</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200 \text{ }^{\circ}\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>23</b> of 50                    |

### Measurement in compressed air conduits and vessels (fixed installation)

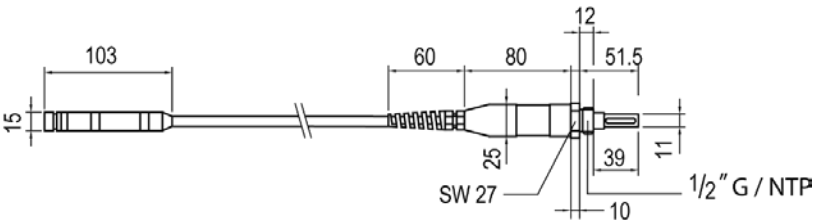
#### For use with transmitters and data loggers

|                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IE102<br>HC2-IE105                                                                              | <p>Accuracy: <math>\pm 0.8\% \text{RH}</math>, <math>\pm 0.1 \text{ K}</math> at <math>10 \dots 30 \text{ }^{\circ}\text{C}</math></p> <p>Humidity measuring range: <math>0 \dots 100\% \text{RH}</math></p> <p>Temperature limits at sensor: <math>-100 \dots 200 \text{ }^{\circ}\text{C}^9</math> (<math>-148 \dots 392 \text{ }^{\circ}\text{F}</math>)</p> <p>Thread: G1/2"</p> <p>Recommended torque: 70 Nm</p> <p>Pressure resistant: 100 bar / 1450 PSI</p> <p>Length (probe head): 120 mm (4.7"). See note below</p> <p>Cable length: 2 m (6.5 ft)<br/>5 m (16.4 ft)</p> <p>Housing material: PEEK (connector)<br/>Stainless steel, DIN 1.4301 (probe head)</p> <p>Standard filter: None, must be ordered separately</p> <p>Sensor: HYGROMER® IN-1</p> <p>Weight: 290 g / 10.2 oz, 2 m cable<br/>660 g / 23.2 oz, 5 m cable</p>    |
| HC2-IE302<br>HC2-IE305                                                                              | <p>Accuracy: <math>\pm 0.8\% \text{RH}</math>, <math>\pm 0.1 \text{ K}</math> at <math>10 \dots 30 \text{ }^{\circ}\text{C}</math></p> <p>Humidity measuring range: <math>0 \dots 100\% \text{RH}</math></p> <p>Temperature limits at sensor: <math>-100 \dots 200 \text{ }^{\circ}\text{C}^9</math> (<math>-148 \dots 392 \text{ }^{\circ}\text{F}</math>)</p> <p>Thread: NPT 1/2"</p> <p>Recommended torque: 70 Nm</p> <p>Pressure resistant: 100 bar / 1450 PSI</p> <p>Length (probe head): 120 mm (4.7"). See note below</p> <p>Cable length: 2 m (6.5 ft)<br/>5 m (16.4 ft)</p> <p>Housing material: PEEK (connector)<br/>Stainless steel, DIN 1.4301 (probe head)</p> <p>Standard filter: None, must be ordered separately</p> <p>Sensor: HYGROMER® IN-1</p> <p>Weight: 290 g / 10.2 oz, 2 m cable<br/>660 g / 23.2 oz, 5 m cable</p> |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

<sup>9</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200 \text{ }^{\circ}\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

<sup>10</sup> The sealing ring withstands only  $-40 \dots 85 \text{ }^{\circ}\text{C}$

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>24</b> of 50                    |

|                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HC2-IE102-M<br>HC2-IE105-M                                                                                                                               | <p>Accuracy: <math>\pm 0.8\% \text{RH}</math>, <math>\pm 0.1 \text{ K}</math> at <math>10 \dots 30\text{ }^{\circ}\text{C}</math></p> <p>Humidity measuring range: <math>0 \dots 100\% \text{RH}</math></p> <p>Temperature limits at sensor: <math>-100 \dots 200\text{ }^{\circ}\text{C}^{11\ 12}</math> (<math>-148 \dots 392\text{ }^{\circ}\text{F}</math>)</p> <p>Thread: G1/2"</p> <p>Recommended torque: 70 Nm</p> <p>Pressure resistant: 100 bar / 1450 PSI</p> <p>Length (probe head): 120 mm (4.7"). See note below</p> <p>Cable length: 2 m (6.5 ft)<br/>5 m (16.4 ft)</p> <p>Housing material: Stainless steel, DIN 1.4301</p> <p>Standard filter: None, must be ordered separately</p> <p>Sensor: HYGROMER® IN-1</p> <p>Weight: 290 g / 10.2 oz, 2 m cable<br/>660 g / 23.2 oz, 5 m cable</p>    |
| HC2-IE302-M<br>HC2-IE305-M                                                                                                                               | <p>Accuracy: <math>\pm 0.8\% \text{RH}</math>, <math>\pm 0.1 \text{ K}</math> at <math>10 \dots 30\text{ }^{\circ}\text{C}</math></p> <p>Humidity measuring range: <math>0 \dots 100\% \text{RH}</math></p> <p>Temperature limits at sensor: <math>-100 \dots 200\text{ }^{\circ}\text{C}^{11\ 12}</math> (<math>-148 \dots 392\text{ }^{\circ}\text{F}</math>)</p> <p>Thread: NPT 1/2"</p> <p>Recommended torque: 70 Nm</p> <p>Pressure resistant: 100 bar / 1450 PSI</p> <p>Length (probe head): 120 mm (4.7"). See note below</p> <p>Cable length: 2 m (6.5 ft)<br/>5 m (16.4 ft)</p> <p>Housing material: Stainless steel, DIN 1.4301</p> <p>Standard filter: None, must be ordered separately</p> <p>Sensor: HYGROMER® IN-1</p> <p>Weight: 290 g / 10.2 oz, 2 m cable<br/>660 g / 23.2 oz, 5 m cable</p> |
|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

**Note 1:**

- o HC2-IExxx-M probes are the same as HC2-IExxx but are equipped with a stainless steel connector instead of PPS.
- o To avoid measurement errors, temperature should be the same on both sides of the mounting wall

<sup>11</sup> Rotronic probes allow a peak load of 3x5 minutes at  $200\text{ }^{\circ}\text{C}$  without suffering any permanent damage. The time between the peak loads is of no importance. Longer peak loads can result in an increased sensor drift of up to  $3\% \text{RH}$  over a 25 hours period.

<sup>12</sup> The sealing ring withstands only  $-40 \dots 85\text{ }^{\circ}\text{C}$

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>25</b> of 50                    |

## 3 General description

### 3.1 Power supply

The accuracy specified for the HC2 probes is valid only when the probe is supplied with a voltage within the range of 3.3...5 VDC. The probes are tested and adjusted at the factory using a supply voltage of 3.3 VDC.

When a voltage source of 3.3...5 VDC is not available, the probe should be used together with a voltage adapter (see separate document **E-M-HC2-accessories**) so as to provide 3.3...5 VDC to the probe. Use of a voltage adapter allows powering the probe from a voltage source of 5 to 24 VDC or 5 to 16 VAC.

During start-up the typical current consumption of the probe is initially 8 mA during 2ms and 5 mA during the next 2s. Without a power supply limiter, the start-up current may reach a maximum of 50 mA. After start-up the current consumption is on average less than 3 mA. Randomly distributed current spikes of maximum 1 mA during 2µs are normal during operation and are caused by the probe micro-processor and associated components.

The HC2 probes are polarity protected by a keyed connector. There is no electrical polarity protection.

### 3.2 Measured parameters

The HC2 probe measures relative humidity with a ROTRONIC Hygromer® IN1 capacitive sensor and temperature with a Pt100 RTD.

### 3.3 Calculated parameters

Using the ROTRONIC HW4 software, the HC2 probe can be configured by the user to calculate either the dew point or the frost point.

### 3.4 Analog output signals

The HC2 probe features two 0...1 V linear analog output signals. The default factory settings are as follows:

Output 1: 0...1 V (humidity) = 0...100 %RH  
Output 2: 0...1 V (temperature) = -40...60°C

Using the ROTRONIC HW4 software any output signal can be made to correspond one of the following:

- o Relative humidity
- o Temperature
- o Dew or frost point

The scale of each analog output can be set within the numerical limits of -999.99 and 9999.99.

If so desired, any output can also be disabled (no signal).

The D/A converters used to generate the analog output signals feature a 16-bit resolution. The 0...1 V analog output signals exhibit a small positive offset of 3 mV or less at 0 V.

Minimum load requirements apply to the external device or circuit connected to the probe voltage outputs. These requirements are defined in the "Operation" chapter

#### Note:

Users who require an analog signal other than 0...1 V should either contact ROTRONIC or connect the probe to one of the available transmitters.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>26</b> of 50                    |

### 3.5 *Digital interface*

The HC2 probe features a UART interface (Universal Asynchronous Receiver Transmitter) that allows two-way communication with the probe. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**). The probe can also be indirectly connected to a PC using an instrument from the ROTRONIC program.

The ROTRONIC HW4 software (version 2.1.0 or higher) allows full access to the following:

- o Measurement data (humidity and temperature) and calculated parameter (dew or frost point)
- o Probe information: name, RS-485 address, humidity sensor status, etc.
- o Probe alarm functions
- o Probe data logging function
- o Probe calibration and probe adjustment functions
- o Probe configuration

The ROTRONIC HW4 software (version 3.3.0 or higher) allows full access to the following:

- o Firmware update of HygroClip probes

### **Communication protocol options**

The probe measurement data can be read without having to use the ROTRONIC HW4 software. Starting with firmware version 1.3, the HC2 probe offers the following communication protocol options (ASCII) which can be selected by connecting the probe to a PC running the ROTRONIC HW4 software (version 2.1.1 or higher):

- o **RO-ASCII:** this is the standard (default) communication protocol used by all AirChip 3000 devices and by the HW4 software. In principle, this protocol supports all of the AirChip 3000 functions but some of the functions require a certain amount of computations to be carried out by an external device such as a PC.
- o **Custom:** this communication protocol can be used to provide compatibility of the HC2 probe with an existing communication system. The Custom communication protocol is limited to reading measurement data from the HC2 probe. Functions such as device configuration, humidity and temperature adjustment, etc. are not supported. The Custom protocol is applicable to all AirChip 3000 devices with a digital interface and allows RS-485 networking
- o **I2C:** The I2C protocol available with the HC2 probe does not allow the networking of devices and is limited to a one way communication where the HC2 probe automatically sends data during each refresh interval to an external device with I2C input.

When using either the RO-ASCII or the Custom protocol, the HC2 probe can be set to send data automatically after each refresh cycle without requiring a data request. When this mode is enabled, the receiving device must be listening at all times in order to get the measurement data.

For details, see document **E-M-AC3000-CP**

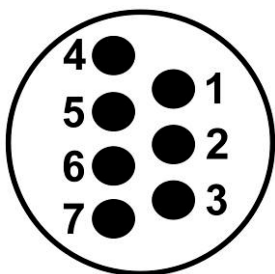
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 27 of 50                           |

### 3.6 Connector

All standard probe models of the HC2 series use the same keyed connector (male). The connector is located either directly on the probe body or at the end of a cable. The probe connector is secured to the matching female connector with a threaded collar.

#### Pin-out diagram

Probe connector (7-pin male – looking at probe)



| Pin # | Wire Color | Name             | Function                         |
|-------|------------|------------------|----------------------------------|
| 1     | Green      | VDD (+)          | 3.3 to 5 VDC                     |
| 2     | Grey       | GND              | Power and digital signal         |
| 3     | Red        | RXD              | UART                             |
| 4     | Blue       | TXD              | UART                             |
| 5     | White      | Out 1 analog (+) | Humidity 0...100%RH (default)    |
| 6     | Brown      | Out 2 analog (+) | Temperature -40...60°C (default) |
| 7     | Yellow     | AGND             | Analog signal ground             |

### 3.7 Sensor protection (dust filter)

Most probes of the HC2 series are supplied with a filter to protect the sensors against dust particles and high air velocity. Depending on the probe model the following types of filter materials are used:

| Material                        | Maximum temperature | Notes                                                                                                                                                          |
|---------------------------------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Polyethylene                    | 100 °C (212 °F)     | Recommended filter material for all applications below 100 °C. Good response and good protection against fine dust particles. No water absorption or retention |
| Teflon                          | 200 °C (392 °F)     | Good protection against fine dust particles and salt (marine environments). Moderately slow response                                                           |
| Stainless steel wire mesh       | 200 °C (392 °F)     | Provides fastest response time. Not recommended in environments with fine dust particles (clogging) and in bioactive environments                              |
| Stainless steel sintered filter | 200 °C (392 °F)     | Good response at low humidity levels. Do not use at high humidity levels. Provides best protection against abrasive particles                                  |

#### Note:

Depending on the probe model, the dust filter is either automatically included with the probe or it must be ordered separately (see Models).

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>28</b> of 50                    |

## 4 User configurable settings and functions

The HC2 probe ships configured as per the factory defaults:

- o Users who intend to use the probe as a stand-alone analog device can use the probe as any conventional humidity and temperature probe. A connecting cable with active electronics may be required to power the probe. Most such users will never have to use the probe configurable settings and functions
- o Users who purchased a probe for use with another ROTRONIC instrument can also use the probe right away and do not necessarily have to use the probe configurable settings and functions
- o Users that intend to use the probe as a stand-alone digital device typically need to use a connecting cable with active electronics and generally need to configure either the probe or the PC

Making use of the probe configurable settings and functions is entirely up to the user and the appropriate settings depend on the user application. We have provided below a short description of the probe functions and also indicated the factory default settings.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>29</b> of 50                    |

## 4.1 Function overview

| MEASUREMENT ACCURACY AND RELIABILITY                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AirChip 3000 Functions                                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| ► Humidity / temperature adjustment                              | <ul style="list-style-type: none"> <li>o 1-point or multi-point humidity calibration or adjustment</li> <li>o 1-point or 2-point temperature calibration or adjustment</li> <li>o Generate a time stamp for calibrations and adjustments</li> <li>o Retain and view last adjustment date and adjustment values</li> <li>o Generate calibration and adjustment protocols</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ► Automatic humidity sensor test and optional drift compensation | <p>Tests the humidity sensor for drift caused by contaminants and can be used to automatically apply a correction. The test is automatically carried out at regular intervals of time. Can be configured, enabled, or disabled</p> <p>The humidity sensor status can be verified either with the HW4 software and is shown as Good, SQ-tuned (corrected for drift) or Bad (defective)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| ► Data recording                                                 | <p>The data recording function differs from a true data logging function in the sense that the AirChip 3000 does not time stamp the data. This data recording function can be used to investigate events such as a sensor malfunction as well as to retrieve data that would otherwise be lost</p> <ul style="list-style-type: none"> <li>o Start or stop data recording - up to 2000 value pairs (%RH and temperature). Starting a recording session erases all previously recorded data</li> <li>o The recording mode and log interval can be specified</li> <li>o When the probe is powered off, the recording session is paused but not ended. As long as the recording session has not been ended, the probe automatically resumes recording data when powered up again</li> <li>o The recorded data can be downloaded to a PC with the HW4 software, time stamped and viewed</li> </ul> |

| MEASUREMENT LOOP VALIDATION |                                                                                                                                             |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| AirChip 3000 Functions      | Description                                                                                                                                 |
| ► Simulator mode            | Used to make the probe generate fixed values for the humidity, temperature and calculated parameter. Can be configured, enabled or disabled |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>30</b> of 50                    |

| <b>SAFEGUARDS</b>             |                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AirChip 3000 Functions</b> | <b>Description</b>                                                                                                                         |
| ► Device write protection     | Used to protect the probe with a password to prevent unauthorized digital access by a digital user. Can be configured, enabled or disabled |

| <b>PROCESS PROTECTION / PROTECTION OF OTHER DEVICES</b> |                                                                                                                                                                                                                      |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AirChip 3000 Functions</b>                           | <b>Description</b>                                                                                                                                                                                                   |
| ► Limit humidity output to 100 %RH                      | Used to prevent the humidity signal from exceeding 100 %RH when condensation forms on the sensor. Can be enabled or disabled                                                                                         |
| ► Out-of-limit value alarm                              | Used to specify the normal range for humidity, temperature and the calculated parameter depending on the user application. Can be configured, enabled or disabled<br><br>Out-of-limit values trigger a digital alarm |
| ► Bad sensor alarm                                      | Built-in function. Cannot be disabled<br><br>A bad humidity or temperature sensor triggers a digital alarm                                                                                                           |
| ► Fail safe mode                                        | Used to specify a "safe" fixed value for humidity and for temperature in the event of a sensor failure. Can be configured, enabled or disabled                                                                       |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>31</b> of 50                    |

## 4.2 Factory default settings

### Note:

Configuration of the probe by the user and access to its functions requires a PC with the ROTRONIC HW4 software (version 2.1.1 or higher) installed. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

| Configurable Settings              | Factory default          |
|------------------------------------|--------------------------|
| Unit system (Metric or English)    | Metric                   |
| Psychrometric calculation          | None                     |
| Output 1 parameter, scale and unit | Humidity: 0...100%RH     |
| Output 2 parameter, scale and unit | Temperature: -40...60 °C |
| Communication protocol             | RO-ASCII                 |
| RS-485 address                     | 0                        |
| Device name                        | Probe type               |

| Functions                          | Factory default                                       |
|------------------------------------|-------------------------------------------------------|
| Humidity / temperature adjustment  | Enabling / Disabling only by HW4 user rights possible |
| Device write protection            | Disabled                                              |
| Limit humidity output to 100 %RH   | Enabled                                               |
| Out-of-limit value digital alarm   | Disabled                                              |
| Data recording                     | Disabled                                              |
| Automatic humidity sensor test     | Disabled                                              |
| Humidity sensor drift compensation | Disabled                                              |
| Fail safe mode                     | Disabled                                              |
| Simulator mode                     | Disabled                                              |

- o For a detailed description of all AirChip 3000 / probe main functions see document **E-T-AC3000-DF-V1**
- o Instructions regarding the configuration of the probe and access to its functions are provided in the following manuals:

**E-M-HW4v3-Main**  
**E-M-HW4v3-F2-001**  
**E-M-HW4v3-DR-001**  
**E-M-HW4v3-A2-001**  
**E-M-AC3000-CP**

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>32</b> of 50                    |

## 5 Mechanical installation

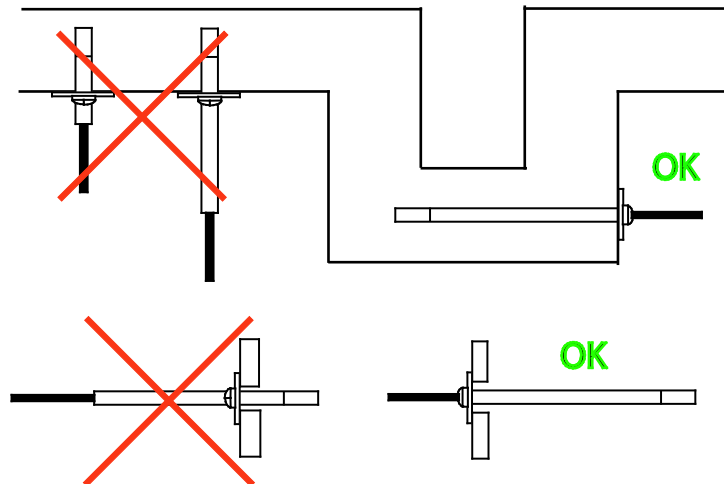
### Note:

The following instructions apply only to the situation where the HC2 probe is fixed installed.

### 5.1 General guidelines for fixed installation

For best results, please observe the following guidelines:

- o Install the probe at a location where humidity, temperature and pressure conditions are representative of the environment or process to be measured. Avoid the following: (a) Close proximity of the probe to a heating element, a cooling coil, a cold or hot wall, direct exposure to sun rays, etc. (b) Close proximity of the probe to a steam injector, humidifier, direct exposure to precipitation, etc. (c) Unstable pressure conditions resulting from excessive air turbulence.
- o When installing the probe on a wall, do not place the probe right above a heat producing device of instrument such as a transmitter or an Ethernet adapter (warm air tends to rise).
- o If possible, choose a location that provides good air movement at the probe: air velocity of at least 1 meter/second (200 ft/ minute) facilitates adaptation of the probe to changing temperature.
- o When installing the probe through a wall, immerse as much of the probe as possible in the environment to be measured.



Position the probe so as to prevent the accumulation of condensation water at the level of the sensor leads. Install the probe so that the probe tip is looking downward. If this is not possible, install the probe horizontally.

Depending on the probe model, a probe holder (mounting flange with a compression fitting) can facilitate installation through a wall.

Future maintenance can be made easier by providing next to the probe a calibration access orifice. During maintenance, this permits the insertion of a reference probe (calibrator). The calibration access orifice should have the same size as the orifice used to install the probe and can be equipped with a probe holder.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>33</b> of 50                    |

## 6 Electrical installation

### Note:

The following instructions apply only to the situation where the HC2 probe is fixed installed.

### 6.1 General guidelines for fixed installation

#### **Power supply wiring**

Heavy machinery and instrumentation should not share the same power supply wiring. If this cannot be avoided, noise filters and surge protectors should be used. Most UPS devices have those features already integrated.

#### **General guidelines for signal cables**

The following guidelines are derived from European Standard EN 50170 for the transmission of signals by copper wires. When planning an installation, the rules provided by EN 50170 should be followed under consideration of local circumstances to determine the position of machines and equipment.

Whenever the level of electromagnetic interference is expected to be high, both the instruments and signal cables should be placed as far away as possible from the source of interference.

In general, signal cables should be installed in bundles or channels / conduits, separate from other cables as indicated in the table below:

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>34</b> of 50                    |

|                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>o Bus signals such as RS485</li> <li>o Data signals for PCs, printers etc.</li> <li>o shielded analog inputs</li> <li>o unshielded direct current (<math>\leq 60V</math>)</li> <li>o shielded process signals (<math>\leq 25 V</math>)</li> <li>o unshielded alternate current (<math>\leq 25V</math>)</li> <li>o coaxial cables for CRT monitors</li> </ul> | <b>in common bundles or channels / conduits</b>                              |
| <ul style="list-style-type: none"> <li>o direct current from 60 V to 400 V (unshielded)</li> <li>o alternate current from 25V to 400 V (unshielded)</li> </ul>                                                                                                                                                                                                                                      | <b>in separated bundles or channels / conduits, without minimum distance</b> |
| <ul style="list-style-type: none"> <li>o direct and alternate current <math>&gt; 400 V</math> (unshielded)</li> <li>o Telephone lines</li> <li>o lines leading into EX-rated areas</li> </ul>                                                                                                                                                                                                       | <b>in separated bundles or channels / conduits, without minimum distance</b> |

### ***Lightning protection***

Cabling in areas with a risk of lightning requires a lightning protection. For cabling underground in between buildings, we recommend the use of special fiber optic cables. If this is not possible, use copper cables that are suitable for underground installation.

## **6.2 Analog signal wiring**

Preferably use a shielded cable to connect the analog outputs of the HC2 to other devices. The maximum cable length is determined by the maximum error that the user will accept. This can be calculated as follows:

Error (V) = cable resistance x current through load

## **6.3 Minimum analog output load**

The HC2 analog outputs are short circuit tolerant and have an internal resistance of less than  $10 \Omega$ . For proper operation, the minimum external load of each output should be at least  $1000 \Omega$ .

## **6.4 Digital signal wiring**

Use one of the available connecting cables (see Accessories) to connect the UART digital interface of the HC2 probe to other devices. Without a signal booster, the maximum cable length should not exceed 5 m (16 ft).

## **6.5 Grounding**

In the case of a fixed installation, ground the HC2 probe, especially if the electronics will be subjected to a low humidity environment (35 %RH or less). The power supply and digital ground (GND) and the analog ground (AGND) should be tied separately to a proper ground so as to avoid spikes in the analog signals.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>35</b> of 50                    |

## 7 Operation

### 7.1 Operation with an indicator, data logger or transmitter

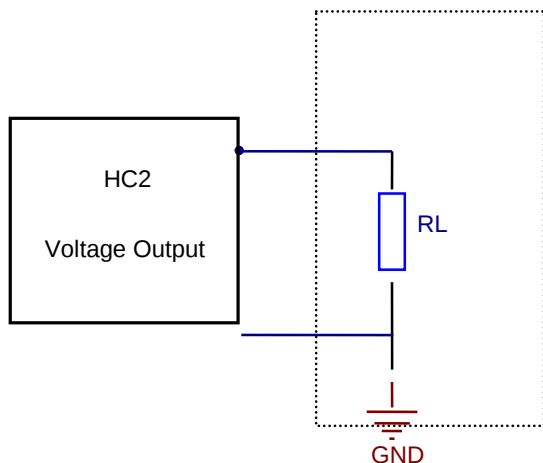
The HC2 probes are compatible with a large number of indicators, data loggers and transmitters from ROTRONIC. Operating instructions are provided in each device manual.

### 7.2 Stand-alone operation as an analog probe

The HC2 probes can be used as a conventional analog probe. See Accessories, supply voltage adapters, connectors and cables. Use the HW4 software to configure the probe as desired, complete the mechanical and electrical installation and power up the probe.

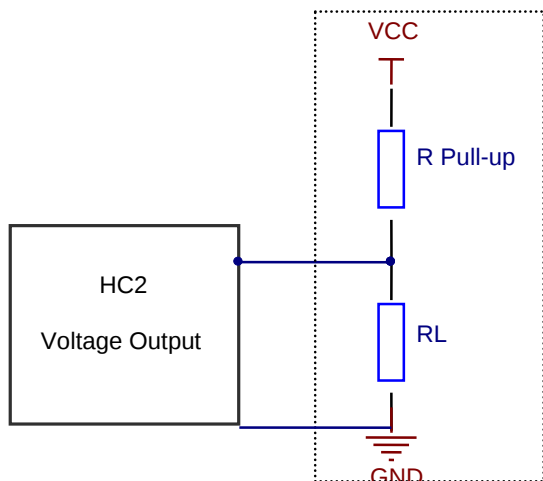
#### Minimum load requirements for the probe voltage outputs

The following requirements apply to any external device or circuit connected to the probe voltage outputs:



| HFC2 output signal | Input resistance RL |
|--------------------|---------------------|
| 0...1V             | ≥1kOhm              |

In the situation where the external device uses an internal pull-up resistor the value of this resistor should meet the requirements shown below. It is also necessary to add a pull-down resistor RL connected to ground in order to be able to read 100% of the range of the probe voltage output.



| HC2 signal | VCC  | R pull-up  | RL     |
|------------|------|------------|--------|
| 0...1V     | 3.3V | ≥ 250 kOhm | 1 kOhm |

| HC2 signal | VCC  | R pull-up  | RL     |
|------------|------|------------|--------|
| 0...1V     | 5.0V | ≥ 400 kOhm | 1 kOhm |

| HC2 signal | VCC   | R pull-up | RL     |
|------------|-------|-----------|--------|
| 0...1V     | 10.0V | ≥ 1 MOhm  | 1 kOhm |

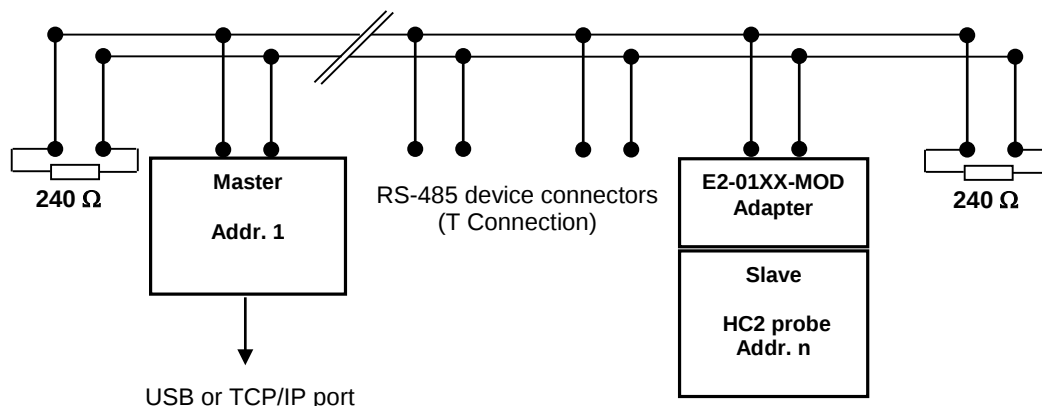
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>36</b> of 50                    |

Stand-alone operation as a digital probe (PC or network)

The HC2 probes can be connected to a PC or to an Ethernet network with one of the available digital interface adapters (see Accessories). Probe configuration and full access to all probe functions requires a PC with the ROTRONIC HW4 software installed. Starting with firmware version 1.3, the probes accept several communication protocols that allow users to read the measurement data without the HW4 software. When using the standard RO-ASCII protocol, access to some of the probe functions is also possible without HW4. For details, see document **E-M-AC3000-CP**.

### 7.3 Connectivity examples for stand-alone probes

Digital connection example: RS-485 network

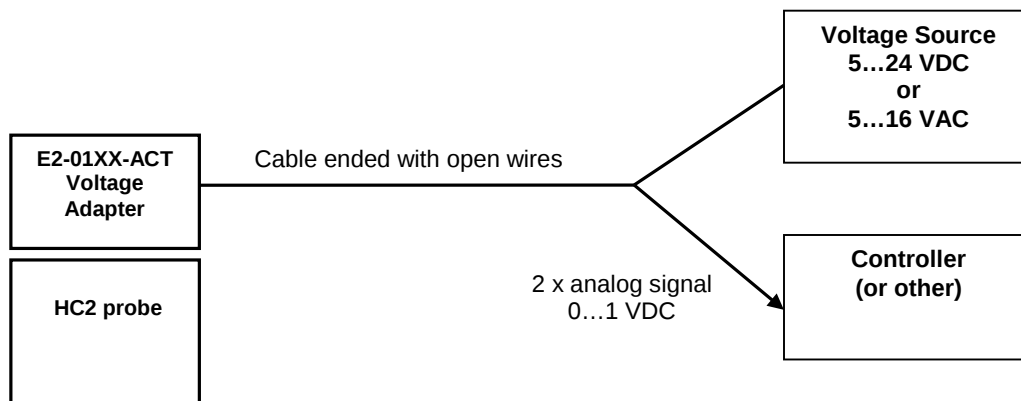


**Note:**

- o The master device can be either a transmitter such as the HF5 (USB or TCP/IP interface) or an adapter such as the AC3010 cable (USB)
- o Power to the combination E2-01XX-MOD and HC2 probe can be provided by an individual AC adapter or by a central voltage source connected to the RS-485 network (requires cables with 2 twisted pairs: one for the data, the other for power)

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>37</b> of 50                    |

#### Analog connection example:



## 7.4 Hand-held probes used with an indicator

The most common source of error when measuring relative humidity with a hand-held probe is a difference between the temperature of the probe and the temperature of the environment. At a humidity condition of 50 %RH, a temperature difference of 1°C (1.8 °F) typically results in an error of 3 %RH on relative humidity.

When using a humidity probe with a portable indicator, it is good practice to monitor the display for temperature stability. When moving the probe from one area to another, the probe should be given sufficient time to equilibrate with the environment to be measured. This time can be shortened, and errors avoided, by using the probe configuration that fits best for your application.

In extreme situations, condensation may occur on the sensors when the probe is colder than the environment. As long as the humidity / temperature limits of the humidity sensor are not exceeded, condensation does not alter the calibration of the sensor. However, the sensor has to dry out before it can provide a valid measurement.

Non-moving air is an excellent insulator. When there is no air movement, surprising differences in temperature and humidity can be noted over short distances. Air movement at the probe generally results in measurements that are both faster and more accurate.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>38</b> of 50                    |

## 8 Maintenance

### 8.1 *Cleaning or replacing the dust filter*

Depending on the conditions of measurement, the filter should be checked from time to time. Corroded, discolored or clogged filters should be replaced.

- o If the probe has a removable cartridge, simply replace the cartridge (leave the metal base on the probe).



- o If the probe has a plastic slotted cap with a built-in filter element follow these instructions:
  - 1) Unscrew the filter from the probe and pull it straight away, in the alignment of the probe, so as not to catch the humidity and temperature sensors.
  - 2) Before putting on a new dust filter, check the alignment of both sensors with the probe. The wires that connect the sensors to the probe are very thin and bend easily. If necessary, correct the alignment by tapping the sensor very gently with a smooth object such as a small plastic rod. Do not use sharp pliers or tweezers as this could puncture the sensor and do not pull hard on the sensor.

### 8.2 *Periodic calibration check*

Both the Pt 100 RTD temperature sensor and associated electronics are very stable and should not require any calibration after the initial factory adjustment.

Long term stability of the ROTRONIC Hygromer humidity sensor is typically better than 1 %RH per year. For maximum accuracy, calibration of the probe should be verified every 6 to 12 months. Applications where the probe is exposed to contaminants may require more frequent verifications. Calibration and adjustment of the HC2 probe can be done with either a PC with the HW4 software installed (version 2.1.0 or higher) or with the HP23 hand-held calibrator. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

Procedure for adjusting the HC2 probe with the ROTRONIC HW4 software:

- o Connect the HC2 probe to the HW4 PC as explained in the HW4 manual **E-M-HW4v3-Main**
- o Start HW4 software on the PC and search for the HC2 probe. (HW4 Main Menu Bar > Devices and Groups > Search for USB masters or Search for RS232 masters or search for Ethernet masters, depending on the connecting cable).
- o After finding the HC2 probe with HW4, expand the device tree to see the HC2 probe functions and select **Probe Adjustment**.
- o For further instructions see HW4 manual **E-M-HW4v3-A2-001**

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>39</b> of 50                    |

### 8.3 *Validation of the output signals transmission*

If so desired, transmission of the HC2 probe output signals can be validated by using the probe simulator function. The HW4 software is required to enable and configure this function. When the function is enabled the probe generates digital and analog signals corresponding to values specified by the user.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>40</b> of 50                    |

## 9 Firmware updates

Firmware updates will be available on the ROTRONIC website for downloading. Firmware files are given a name that shows both to which device the file applies and the version number of the firmware. All firmware files have the extension HEX. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

Procedure for updating the firmware:

- o Connect the HC2 probe to the HW4 PC as explained in the HW4 manual **E-M-HW4v3-Main**
- o Copy the firmware update file from the ROTRONIC website to the PC.
- o Start HW4 software on the PC and search for the HC2 probe. (HW4 Main Menu Bar > Devices and Groups > Search for USB masters or Search for RS232 masters or search for Ethernet masters, depending on the connecting cable).
- o After finding the HC2 probe, expand the device tree to see the HC2 probe functions. Select Device Manager. In the Device Manager menu bar select Tools > Firmware Update. For instructions see document **E-M-HW4v3-F2-001**

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>41</b> of 50                    |

## 10 Technical data

### 10.1 Specifications

| General                  |                            |
|--------------------------|----------------------------|
| Device type              | Humidity temperature probe |
| Mechanical configuration | See models                 |
| IP protection class      | IP65                       |

| Power supply and connections                       |                                    |
|----------------------------------------------------|------------------------------------|
| Supply voltage (VDD)                               | 3.3...5 VDC $\pm 0\%$              |
| Recommended supply voltage                         | 3.3 VDC                            |
| Supply voltage during factory tests and adjustment | 3.3 VDC                            |
| Supply voltage stability / ripple                  | See System Accuracy, effect of VDD |
| Nominal current consumption                        | <4.5 mA at VDD = 3.3...5 VDC       |
| Maximum start-up current unlimited                 | <50mA during 2 $\mu$ s             |
| Minimum start-up current                           | 8 mA during 2ms and 5 mA during 2s |
| Maximum current spike during operation             | 1 mA during maximum 2 $\mu$ s      |
| Polarity protection                                | Mechanical only (keyed connector)  |

| Humidity measurement |                                                                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sensor               | ROTRONIC Hygromer <sup>®</sup> IN1                                                                                                                                            |
| Measuring range      | 0...100 %RH                                                                                                                                                                   |
| Measurement accuracy | $\pm 0.8$ %RH, at 10...30 °C (HC2-S(3), HC2-IC, HC2-IM, HC2-IE)<br>$\pm 0.5$ %RH, at 10...30 °C / 10...90 %RH (HC2-S(3)H)<br>$\pm 1.5$ %RH (HC2-C04, HC2-C05; see also §10.3) |
| Repeatability        | 0.3 %RH                                                                                                                                                                       |
| Long term stability  | <1 %RH / year                                                                                                                                                                 |
| Sensor time constant | Typical 10 sec, 63% of a 35 to 80 %RH step change (1m/sec air flow at sensor)                                                                                                 |

| Temperature measurement |                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------|
| Sensor                  | Pt100 RTD, IEC 751 class A (HC2-S)<br>Pt100 RTD, IEC 751 1/3 class B (HC2-IC / HC2-IM / HC2-IE) |
| Measuring range         | -100...200 °C (see also environmental limits)                                                   |
| Measurement accuracy    | $\pm 0.1$ °C, at 10...30 °C<br>$\pm 0.3$ °C, at 10...30 °C (HC2-C04, HC2-C05; see also §10.3)   |
| Repeatability           | 0.05 °C                                                                                         |
| Long term stability     | <0.1 °C / year                                                                                  |
| Sensor time constant    | Typical 4 sec, 63 %RH of a step change (1 m/sec air flow at sensor)                             |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>42</b> of 50                    |

|                              |                                        |
|------------------------------|----------------------------------------|
| <b>Calculated parameters</b> |                                        |
| Psychrometric calculations   | Dew or frost point (user configurable) |

|                                            |                                                      |
|--------------------------------------------|------------------------------------------------------|
| <b>Start-up time and data refresh rate</b> |                                                      |
| Start-up time                              | 1.5 s (typical)                                      |
| Data refresh rate                          | 1.0 s (typical) – when not calculating any parameter |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>43</b> of 50                    |

| Configurable analog outputs      |                                                         |
|----------------------------------|---------------------------------------------------------|
| Output 1                         | Can be made to correspond to any parameter              |
| Factory default parameter        | Relative humidity                                       |
| Factory default scale            | 0...100 %RH                                             |
| Output 2                         | Can be made to correspond to any parameter              |
| Factory default parameter        | Temperature                                             |
| Factory default scale            | -40...60 °C                                             |
| Output 1 and Output 2            |                                                         |
| Signal type                      | 0...1 V                                                 |
| User configurable scaling limits | -999.99 ... 9999.99 engineering units                   |
| Offset at 0 V                    | +3 mV (maximum)                                         |
| Ripple                           | <1.2 mV/x 2µs                                           |
| Short circuit tolerant           | Yes                                                     |
| Internal resistance              | <10 Ω                                                   |
| Minimum external load            | 1000 Ω                                                  |
| Deviation from digital signal    | <±1 mV from 0.002 to 1.0 V / + 2 mV from 0.0 to 0.002 V |

| Digital interface        |                                                                                             |
|--------------------------|---------------------------------------------------------------------------------------------|
| Interface type           | UART (Universal Asynchronous Receiver Transmitter)                                          |
| Organization             | Dialog, duplex                                                                              |
| Default configuration    | Baud rate : 19200<br>Parity : none<br>Data bits : 8<br>Stop bits : 1<br>Flow Control : none |
| Tolerance                | 3 %                                                                                         |
| Baud rate configuration: | No                                                                                          |
| Logical levels           | Logical 0: $\leq 0.3V * VDD$<br>Logical 1: $\geq 0.8V * VDD$                                |
| Maximum cable length     | 5 m (16.4 ft) w/o signal booster                                                            |

| Effect of VDD in the range 3.3 to 5.0 V (see note below) |                                 |
|----------------------------------------------------------|---------------------------------|
| Temperature (digital)                                    | <0.05 °C                        |
| Humidity (digital)                                       | <0.25 %RH                       |
| Analog signals                                           | <2mV (reference: digital value) |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>44</b> of 50                    |

| General specifications      |                             |
|-----------------------------|-----------------------------|
| Housing material            | See Models                  |
| Collar material (connector) | Stainless steel, DIN 1.4301 |
| Dust filter material        | See Models                  |
| Protection grade            | IP65                        |
| Physical dimensions         | See Models                  |
| Weight                      | See Models                  |

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
|                                                                  | Document Type                           |
| Document title                                                   | Page <b>45</b> of 50                    |

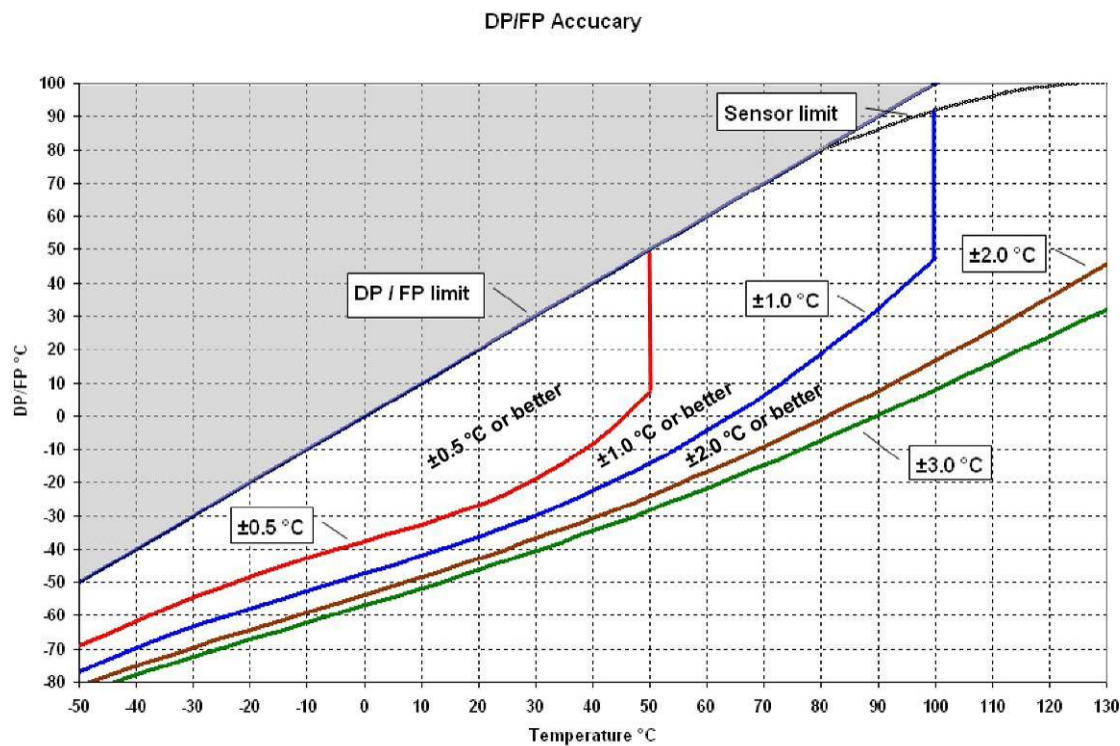
| Conformity to standards |                                                                                                                                                                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CE / EMC immunity       | <p>EMC Directive:<br/>until 20.04.2016: 2004/108/EG<br/>from 20.04.2016: 2014/30/EU</p> <p>EN 61000-6-1: 2007, EN 61000-6-2: 2005<br/>EN 61000-6-3: 2007+A1:2011+AC:2012, EN 61000-6-4: 2007+A1:2011</p> <p>Performance criterion: <a href="http://www.rotronic.com">www.rotronic.com</a></p> |
| Solder type             | Lead free (RoHS directive 2011/65/EU)                                                                                                                                                                                                                                                         |
| FDA / GAMP directives   | compatible                                                                                                                                                                                                                                                                                    |

| Environmental limits            |                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Storage and transit             | -50...+100 °C / 0...100 %RH, non condensing                                                                                   |
| Operating limits at electronics | -50 ... +100 °C<br>0...100 %RH, non condensing                                                                                |
| Temperature limits at sensor    | See Models                                                                                                                    |
| Maximum humidity at sensor      | <p>100 %RH up to 80 °C (176 °F)<br/>75 %RH at 100 °C (212 °F)<br/>45 %RH at 125 °C (260 °F)<br/>15 %RH at 150 °C (302 °F)</p> |
| Maximum air velocity at probe   | 20 m/s (3,935 ft /min)                                                                                                        |
| Critical environments           | Humidity sensor: as per DV04-14.0803.02 - Critical chemicals                                                                  |

|                                                                                    |                                                 |
|------------------------------------------------------------------------------------|-------------------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b><br>Document code                                       | Rotronic AG<br>Bassersdorf, Switzerland<br>Unit |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b><br>Document title | <b>Instruction Manual</b><br>Document Type      |
|                                                                                    | Page <b>46</b> of 50                            |

## 10.2 Dew point accuracy

The HC2 probes can be configured to calculate either the dew point or frost point based on the measurement of relative humidity and temperature. The accuracy of this conversion varies, depending on the humidity and temperature conditions as shown in the graph below:



**Example:** at a temperature of 20 °C, a dew point value of -37 °C is measured with an accuracy of ±1.0 °C or better.

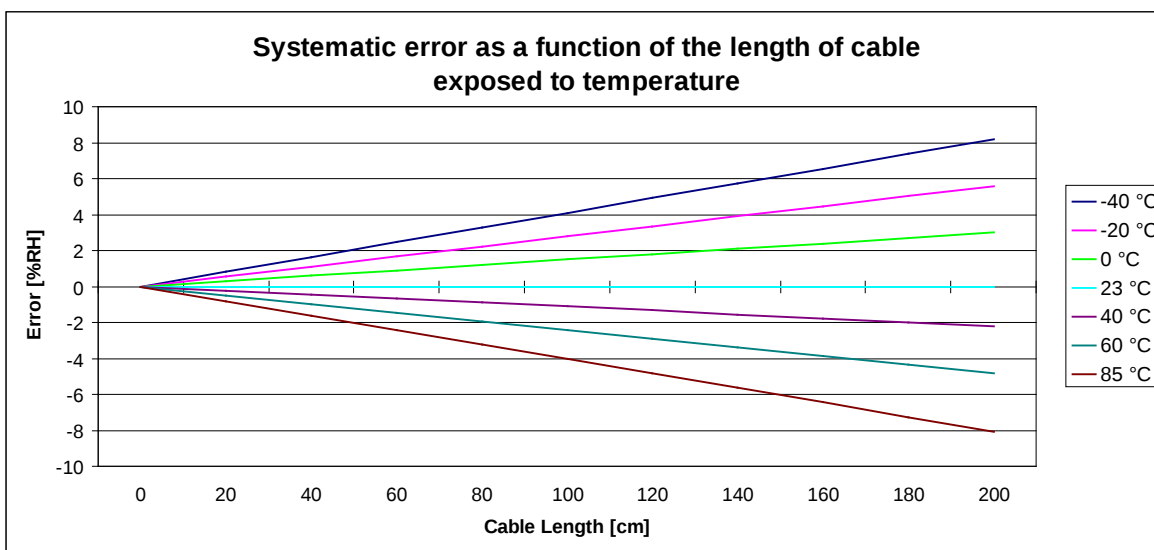
|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page 47 of 50                           |

### 10.3 *Effect of cable temperature on the accuracy of probes HC2-C04 and HC2-C05*

Accuracy of the HC2-C04 and HC2-C05 probes is affected by the temperature of the cable separating the sensors from the electronics.

#### Error on humidity:

Humidity measurement accuracy is specified at  $\pm 1.0$  %RH when both the humidity sensor and the cable are at 23 °C. Depending both on the value of temperature and on the exposed length of cable, the probe exhibits a predictable error (bias) as illustrated below:



#### Error on temperature:

Temperature measurement accuracy is specified at  $\pm 0.3$  °C when both the temperature sensor and the cable are at 23 °C. When the full length of the 2 meter probe cable is exposed to temperature values within the range of -40 to 85 °C, the additional error is limited to 0.125 °C.

|                                                                      |                                         |
|----------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                          | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                        | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature<br/>Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                       | Document Type                           |
|                                                                      | Page <b>48</b> of 50                    |

## 11 Accessories and parts

For accessories and parts such as the HW4 configuration software, extension cables, adapter cables, calibration accessories and spare dust filters, please see document **E-M-HC2-accessories**

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>49</b> of 50                    |

## 12 Supporting documents

| Document File Name         | Contents                                                                                             |
|----------------------------|------------------------------------------------------------------------------------------------------|
| <b>E-M-HC2-accessories</b> | Accessories and parts for probes, indicators and transmitters                                        |
| <b>E-T-AC3000-DF-V1</b>    | AirChip 3000 Description and Main Functions                                                          |
| <b>E-M-HW4v3-DIR</b>       | List of the HW4 manuals                                                                              |
| <b>E-M-HW4v3-Main</b>      | HW4 software version 3: General instructions and functions common to all devices                     |
| <b>E-M-HW4v3-F2-001</b>    | HW4 software version 3: HC2 probe series<br>Device configuration and AirChip 3000 functions          |
| <b>E-M-HW4v3-A2-001</b>    | HW4 software version 3: Probe Adjustment function AirChip 3000 devices                               |
| <b>E-M-HW4v3-DR-001</b>    | HW4 software version 3: Data Recording Function AirChip 3000 Devices                                 |
| <b>E-M-AC3000-CP</b>       | AirChip 3000 Communication Protocol                                                                  |
| <b>E-M-TCPIP-Conf</b>      | Configuration procedures for ROTRONIC devices<br>with Ethernet (TCP/IP) interface                    |
| <b>E-M-CalBasics</b>       | Temperature and humidity adjustment basics<br>Instructions for using the ROTRONIC humidity standards |
| <b>E-T-HumiDefs</b>        | Humidity Definitions                                                                                 |

**Note:**

All document file names have an extension corresponding to the document release number (example of a first release: E-M-HW4v2-Main\_10). This extension is not shown in the above table.

|                                                                  |                                         |
|------------------------------------------------------------------|-----------------------------------------|
| <b>E-M-HC2 Probes-V1_38</b>                                      | Rotronic AG<br>Bassersdorf, Switzerland |
| Document code                                                    | Unit                                    |
| <b>HygroClip 2 (HC2) Humidity Temperature Probes: User Guide</b> | <b>Instruction Manual</b>               |
| Document title                                                   | Document Type                           |
|                                                                  | Page <b>50</b> of 50                    |

## 13 Document releases

| Doc. Release | Date           | Notes                                                                                                                                                                                                 |
|--------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| _20          | Apr. 11, 2009  | Original release                                                                                                                                                                                      |
| _21          | Aug. 19, 2009  | Added probe model HC2-AW<br>Corrected the specification of some of the probe materials                                                                                                                |
| _22          | Jun. 18, 2010  | Updated document to HW4 software v.3                                                                                                                                                                  |
| _23          | May 20, 2011   | Modified dimensional specifications of the HC2-C04 probe                                                                                                                                              |
| _24          | Jan. 6, 2012   | Changed the factory default for data recording to "disabled"                                                                                                                                          |
| _25          | May 30, 2013   | Page 10: reduced maximum pressure to 100 bar / 1450 PSI for the HC2-IE102/105 and HC2-IE302/305                                                                                                       |
| _26          | Nov. 2013      | Changes for HygroClip2 with firmware v3.0<br>Power supply range changed to 3.3...5 VDC<br>HC2-IE maximum pressure range changed to 100 bar.<br>Added HC2-SM<br>Added HC2-IMxxx-M<br>Added HC2-IExxx-M |
| _27          | July 2014      | Korrections of technical specification                                                                                                                                                                |
| _28          | March 2015     | Update of Pt100 class. Industrial probes are delivered with Pt100 1/3 class B since the end of March 2015.                                                                                            |
| _29          | March 2015     | Accuracy range updated                                                                                                                                                                                |
| _30          | March 2015     | IP protection class added<br>Updated spec of collar material                                                                                                                                          |
| _31          | April 2015     | HC2-S-HH, HC2-ICxxx-HH probes integrated                                                                                                                                                              |
| _32          | June 2015      | Update of document layout                                                                                                                                                                             |
| _33          | July 2015      | Specification of HC2-IC / HC2-IM / HC2-IE adapted                                                                                                                                                     |
| _34          | September 2015 | HC2-IC, HC2-IM, HC2-IE: temperature specifications adapted                                                                                                                                            |
| _35          | November 2015  | Update temperature specification HC2-IE sealing ring                                                                                                                                                  |
| _36          | December 2015  | BFC-UART added                                                                                                                                                                                        |
| _37          | January 2016   | Recommended torque for HC2-IE probes added                                                                                                                                                            |
| _38          | May 2016       | Update EMC guideline                                                                                                                                                                                  |